

Thank you for purchasing Comptech Exhaust Tip Insert. All components have been designed and manufactured utilizing the latest in technology and materials.

Remember to always use jackstands to support the vehicle when a car lift is not available. Always work in a clean environment and use the appropriate safety equipment to avoid any potential damage or injuries.



Parts List:


- 1— Tip Insert
- 1— Drill Bit (not shown)
- 1— Screw (not shown)

Step #1

- Raise the vehicle and make sure it is properly supported. Clean carbon deposits from exhaust tip.
- Align insert with the screw tab facing the top inner wall of the exhaust tip. Make sure the insert fits squarely and tap the insert into the exhaust tip until it stops against the back wall with the screw tab flush against the upper wall of the exhaust tip. The insert is made to be a press fit.

Step #2

- Mark the screw hole with a center punch. Using the supplied drill bit, drill a pilot hole into the first wall of the exhaust tip, do not drill further than the inner wall of the exhaust tip.
- Align the screw with the hole in the tab and the new pilot hole and insert screw. Do not over torque the screw, the screw provided is a self tapping screw and will strip out if over tightened.

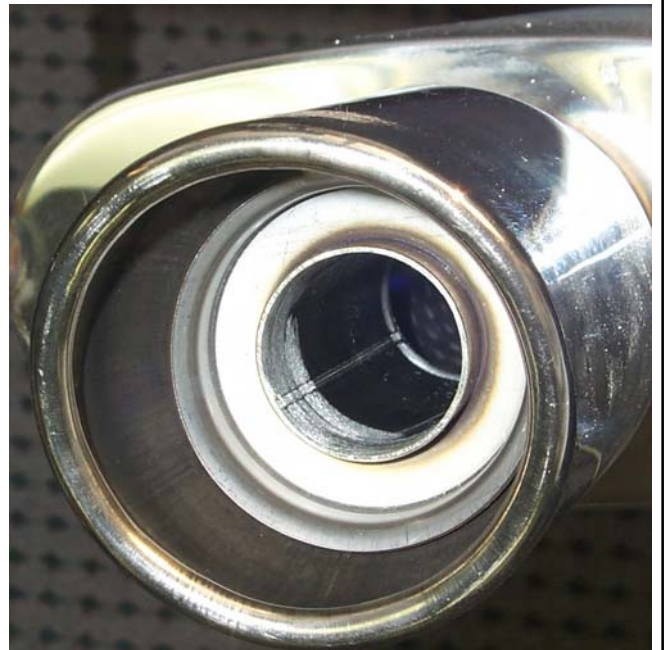

...ENJOY THE DRIVE!